




# SPARE PARTS & COMPLETE UNITS



STANDARD BIG NINE MODEL 1933.

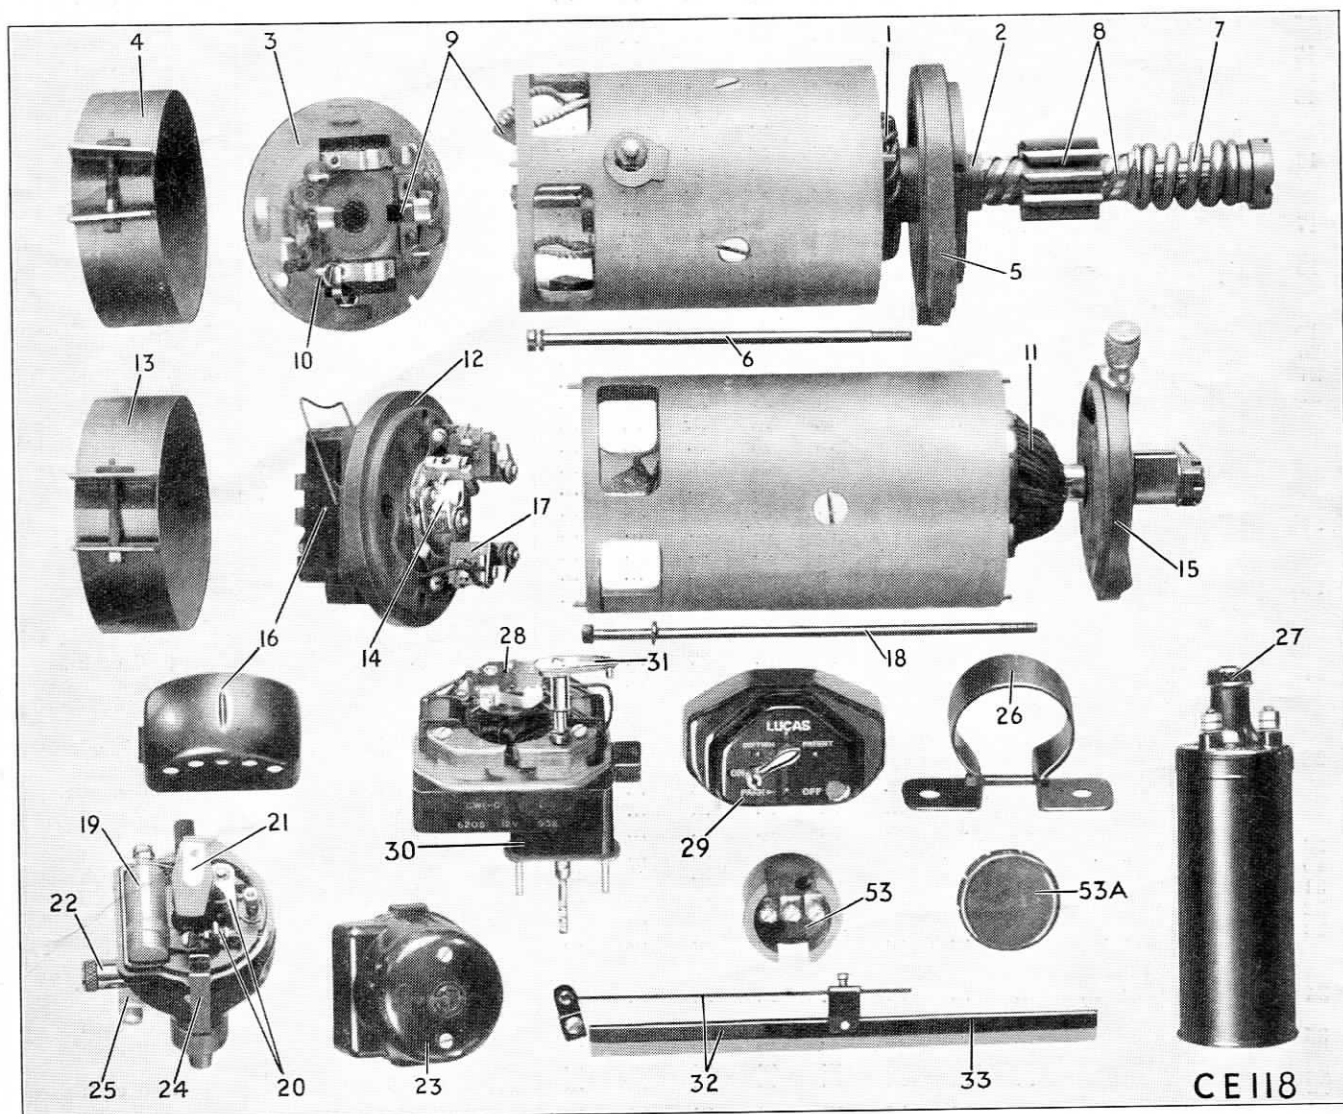


JOSEPH LUCAS LTD., BIRMINGHAM, ENGLAND.

Illustration No.	DESCRIPTION OF PART.	Quote this Part No.	English List Price. £ s. d.
<b>STARTER COMPLETE—12v. E.R. CLOCKWISE—</b>			
1	Armature ... ..	<b>M418A/2 V1/1</b>	<b>7 2 6 each</b>
2	Buffer Washer (drive) ... ..	AY31	2 7 6 each
3	C.E. Bracket complete with Brushgear, Brushes & Brg. Bush	L1404/6F	1 0 each
4	Commutator End Band Cover complete with Nut and Screw	BY28	16 0 each
	Commutator End Greaser Cap ... ..	HY200	1 4 each
5	Driving End Bracket complete with Bearing Bush ... ..	L3859/1	6 each
	Field Coils (per set) ... ..	CY62	10 6 each
6	Fixing Bolts ... ..	FC852	15 6 set
7	Main Spring (drive) ... ..	L3219/2	6 each
8	Pinion and Sleeve (drive) ... ..	L3297/3A	1 6 each
9	Set of Brushes ... ..	JY114	12 6 each
10	Set of Brush Springs ... ..	D45	8 0 set
		ST60	1 0 set
<b>DYNAMO COMPLETE—12v. E.R. CLOCKWISE—</b>			
11	Armature ... ..	<b>E418AL/0 V/0</b>	<b>5 0 0 each</b>
12	C.E. Bracket c/w Brushgear and Brg.—less Resistance Unit	AY4257	1 12 6 each
	Commutator End Ball Bearing ... ..	BY2647	19 0 each
13	Commutator End Band Cover complete with Nut and Screw	LS5	8 0 each
14	Control Brushgear—less Brush ... ..	HY200	1 4 each
15	Driving End Bracket complete with Brg. and Bearing Plate	EY183	2 0 each
	Driving End Ball Bearing ... ..	CY964	14 0 each
	Field Coil ... ..	No.117	8 3 each
16	Resistance Unit complete ... ..	FC111	10 0 each
	Resistance Unit Cover ... ..	TFR2/0/V	5 0 each
	Resistance Unit Fuse (per box of 1-dozen) ... ..	L3490/4C	1 3 each
17	Set of Brushes ... ..	FA4/5	1 6 box
	Set of Brush Springs ... ..	D53	2 3 set
18	Through Fixing Bolts ... ..	ST517	9 set
		L4558/2	6 each
<b>DJH4A/20 V1/1 DISTRIBUTOR—</b>			
19	Condenser complete with Clip ... ..	<b>DJH4A/20 V1/1</b>	<b>1 17 0 each</b>
20	Contact Breaker Lever Ass. c/w Contact Screw & Contacts ...	CON246	3 6 each
21	Distributor Arm Assembly ... ..	ST361	3 0 set
22	Lubricator ... ..	M2248/3	1 6 each
	Lubricator Stem ... ..	RW1	6 each
	Lubricator Stem ... ..	M3192/4	4 0 dozen
	Lubricator Felt ... ..	M3192/4	6 each
	Lubricator Spring ... ..	M3193/2	
23	Moulded Cover complete with Cap ... ..	M3193/3	
24	Moulded Cover Spring Clip ... ..	M2903/2	5 0 each
	Moulded Cover Spring Clip ... ..	M2375/2A	3 0 dozen
	Moulded Cover Carbon and Spring ... ..	M2375/2A	6 each
25	Timing Lever complete with Nut and Screw ... ..	M43	6 each
		BX91	1 3 each
<b>Q12/5 L/0 IGNITION COIL—</b>			
26	Coil Fixing Bracket ... ..	<b>Q12/5 L/0</b>	<b>1 0 0 each</b>
27	H.T. Terminal Nut ... ..	No.1Bkt.	1 6 each
	H.T. Terminal Nut ... ..	M2244/3	4 0 dozen
		M2244/3	6 each
<b>CW1/1 V/0 WINDSCREEN WIPER—</b>			
28	Brushgear Assembled complete with Brushes ... ..	<b>CW1/1 V/0</b>	<b>1 5 6 each</b>
	Brushgear Tension Spring ... ..	L3973/2A	3 0 each
	Brushgear Tension Spring ... ..	L3968/2A	2 6 dozen
	Cable (6ft. length) ... ..	L3968/2A	6 each
29	Cover Assembly complete with Switch ... ..	L4443/4	9 each
30	Moulded Packing Piece and Bearing Assembled ... ..	L4374/2A	3 0 each
31	Parking Handle ... ..	L4897/1	1 6 each
32	Squeegee and Arm Assembly ... ..	L4286/2	1 3 each
33	Squeegee Assembly ... ..	AZ108	3 3 each
		AZ44	1 6 each
<b>C/V933 INSTRUMENT PANEL—</b>			
34	Ammeter ... ..	<b>C/V933</b>	<b>2 12 6 each</b>
	Panel Lighting Bulb ... ..	AMP59	4 0 each
35	Panel Switch ... ..	BAS.10.S	1 3 each
	Panel Switch Distance Collar ... ..	PS2/0 V1/0	2 9 each
36	Ignition Switch ... ..	L4828/1	
37	Ignition Key ... ..	S36/0 V/0	5 0 each
38	Glass (large) ... ..	L3514/3B	6 each
	Glass (large) ... ..	NC809/13	3 0 dozen
		NC809/13	6 each
†—Refer to Set of Minor Parts at end of List.			

If the model and type marks on your machine are not the same as given here, please quote them in full when ordering.

INSIST UPON GENUINE LUCAS SPARE PARTS.

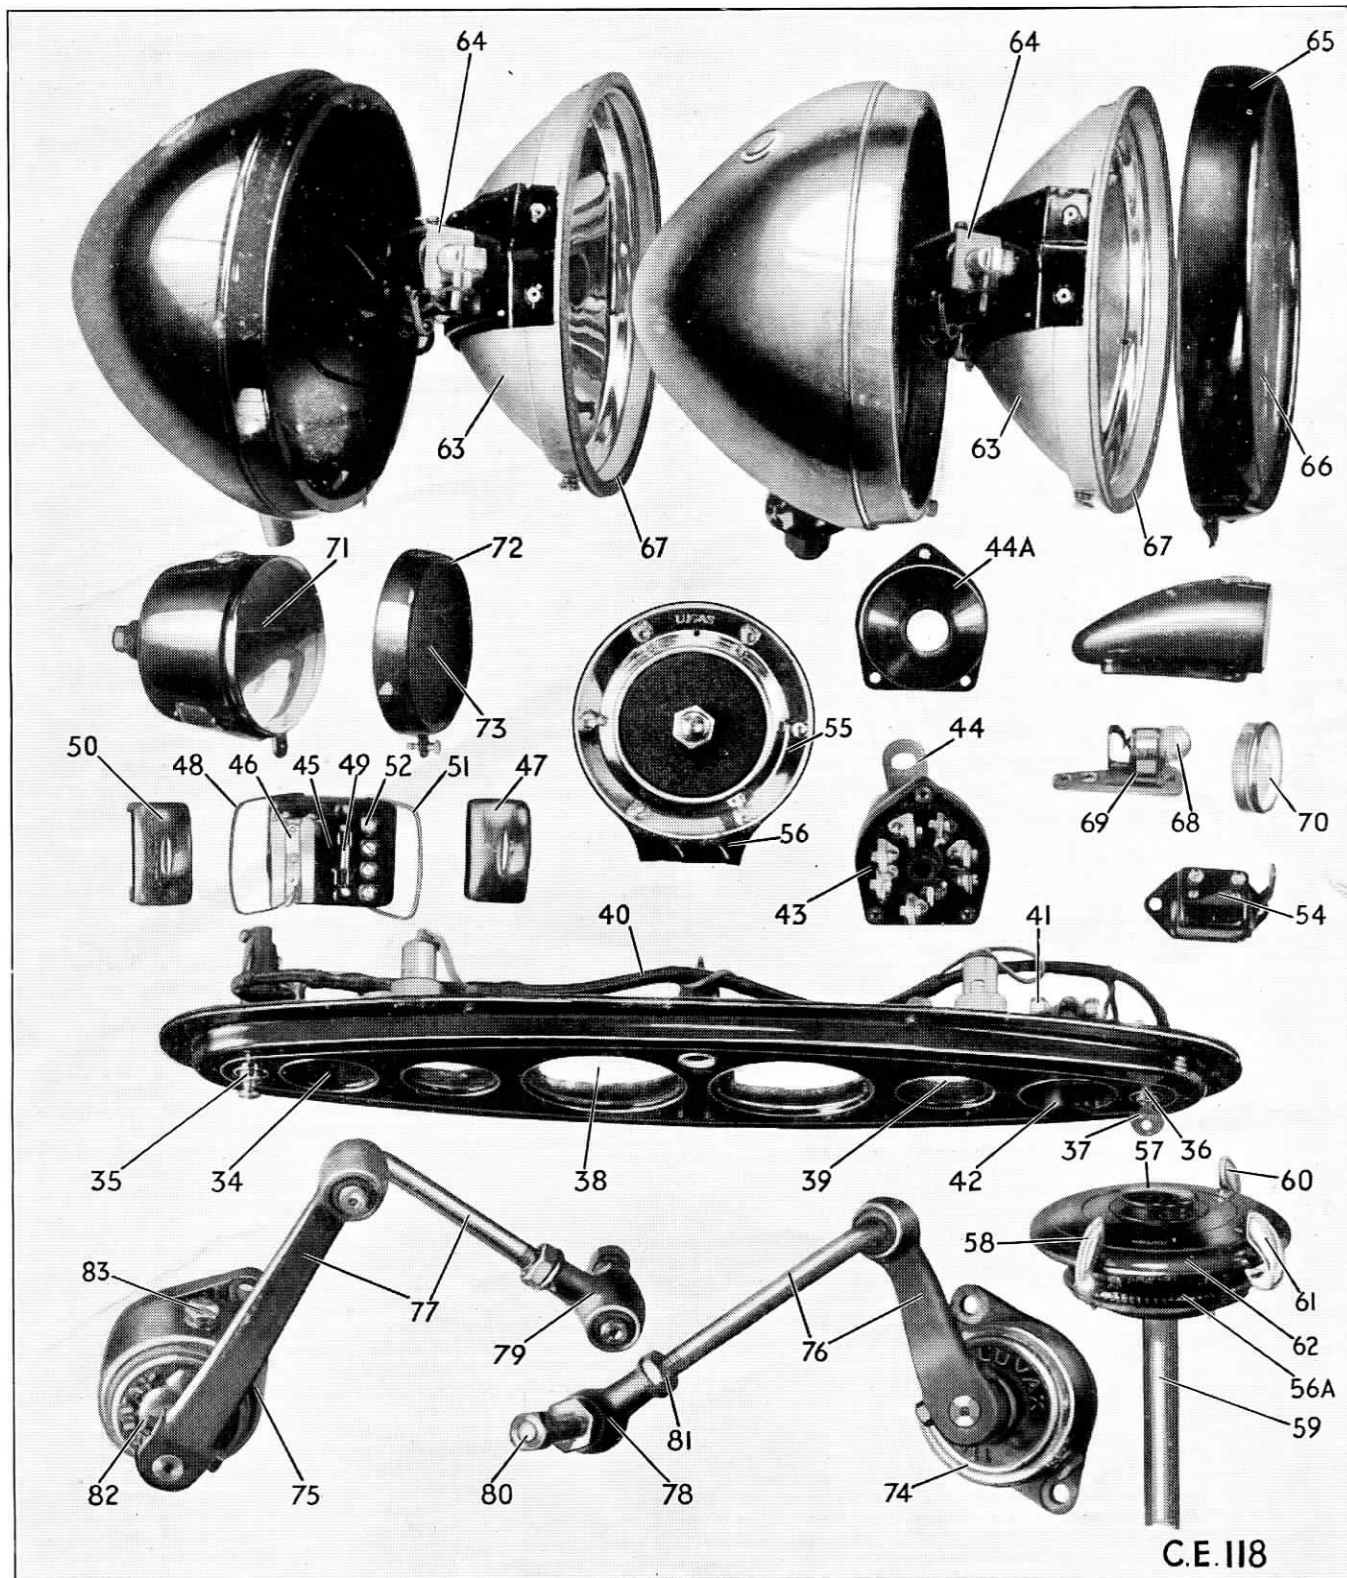

INSIST UPON GENUINE LUCAS SPARE PARTS.

Illustration No.	DESCRIPTION OF PART.	Quote this Part No.	English List Price. £ s. d.
	<b>INSTRUMENT PANEL—Continued—</b>		
39	Glass (small) ... ..	NC809/12	2 0 dozen
40	Glass (small) ... ..	NC809/12	6 each
41	Panel Connection complete with Bulb Holders ... ..	L4797/3	5 0 each
42	Starter Switch ... ..	ST8/0 V4/0	4 0 each
	Starter Switch Knob ... ..	L3909/1B	8 each
	Earth Terminal Screw ... ..	L963/5A	†
	Instrument Fixing Screw ... ..	L4958/4	†
	Warning Light ... ..	WL4/0/12v	2 6 each
	<b>SLC2 SWITCHBOX—</b>	<b>SLC2/1 V1/0</b>	<b>15 0 each</b>
43	Assembled Base complete with Terminal Straps, etc ... ..	JX1038	6 0 each
	Insulating Bush ... ..	L3580/3	3 0 dozen
	Insulating Bush ... ..	L3580/3	6 each
	Rotor Insulating Plate complete with Springs and Contact ... ..	KX1022	1 3 each
44	Rotor Insulating Plate (thick) ... ..	L3352/1	1 6 each
	Switch Case complete with Fixing Strap ... ..	L1046	2 6 each
	Terminal Locking Plate ... ..	L2910/2	†
	Terminal Locking Plate Screw ... ..	L2913/4	†
	Terminal Locking Plate Spring Washer ... ..	L1041/1	†
44A	Terminal Cover c/w Fixing Screws and Spring Washers ... ..	SK40	3 0 each
	<b>CF3 CUT-OUT—12v.—</b>	<b>CF3/12v</b>	<b>11 6 each</b>
45	Assembled Base complete with Rivetted Terms. & Fuse Clips	JX97	3 6 each
46	Cut-out, SB5 (12v.) ... ..	AZ94	6 6 each
47	Cut-out Cover ... ..	L3306/1A	8 each
48	Cut-out Cover Spring Clip ... ..	L3586/1	†
49	Fuse Carton Assembly (per box of ½-dozen) ... ..	L3275/4	1 6 each
50	Terminal Cover ... ..	L3306/4B	8 each
51	Terminal Cover Spring Clip ... ..	L3586/2	†
52	Terminal Screws ... ..	L963/5A	†
53	<b>C30 JUNCTION BOX—</b>	<b>C30</b>	<b>2 6 each</b>
53A	Cover complete with Insulator ... ..	L2384/2A	3 0 dozen
	Cover complete with Insulator ... ..	L2384/2A	6 each
54	<b>39C STOP LAMP SWITCH—</b>	<b>39C</b>	<b>2 6 each</b>
55	<b>HF317 ALTETTE ELECTRIC HORN—</b>	<b>HF317/4/12v</b>	<b>1 5 0 each</b>
	<b>HF317H ALTETTE ELECTRIC HORN—</b>	<b>HF317H/4/12v</b>	<b>1 5 0 each</b>
	Cable Clip ... ..	L3454/4A	†
56	Fixing Bracket ... ..	L3214/4B	1 0 each
	Fixing Bracket Bush ... ..	L3584/2	†
	<b>V32 FINGERTIP CONTROL—</b>	<b>V32 Control</b>	<b>1 10 0 each</b>
56A	Bottom Cover complete with Clamping Bracket ... ..	NC1303/42A	2 6 each
	Cable ... ..	NC1303/47	1 6 each
	Clamping Bracket Screw ... ..	NC1303/14A	†
	Contact Plate complete with Insul. Washer & Distance Pieces	C67	1 3 each
	Contact Plate Spring Retaining Ring ... ..	NC1303/46A	†
	Distance Piece Screw ... ..	NC1303/11	†
	Horn Push Contact Cup ... ..	NC1303/8	2 6 dozen
	Horn Push Contact Cup ... ..	NC1303/8	6 each
57	Horn Push Knob complete with Insert ... ..	NC1303/7	1 0 each
	Horn Push Spring ... ..	NC1303/19A	†
	Horn Push Spring Location Washer ... ..	NC1301/32	†
58	Ignition Lever and Tube Assembled ... ..	NC1303/44	5 0 each
59	Stator Tube ... ..	NC1303/25A	3 0 each
60	Switch Lever and Tube Assembled ... ..	NC1303/45	4 9 each
61	Throttle Lever and Tube Assembly ... ..	NC1303/43	5 0 each
62	Top Cover only ... ..	NC1303/1A	4 6 each
	Top Cover complete with Horn Push Knob and Contact ... ..	C101	5 9 each
	<b>LB140S HEADLAMP (Stationary Reflector)—Chromium—</b>	<b>LB140S/Chr/12v</b>	<b>2 15 0 each</b>
	<b>L140 HEADLAMP (Stationary Reflector)—Black—</b>	<b>L140/Blk/12v</b>	<b>2 3 9 each</b>
	<b>L140EDS HEADLAMP (Dipping Reflector)—Black—</b>	<b>L140/EDS/12v/Blk</b>	<b>3 11 3 each</b>
	<b>LB140SEDS HEADLAMP (Dipping Reflector)—Chromium—</b>	<b>LB140S/EDS/Chr/12v</b>	<b>3 17 0 each</b>
	Bulb ... ..	BAS.4.S	2 6 each
	Stationary Reflector complete with Bulb Holder & Interior ... ..	RA41	8 0 each
	Bulb Holder complete with Interior ... ..	SA160	1 6 each
	†—Refer to Set of Minor Parts at end of List.		

If the model and type marks on your machine are not the same as given here, please quote them in full when ordering.

INSIST UPON GENUINE LUCAS SPARE PARTS.

Illustration No.	DESCRIPTION OF PART.	Quote this Part No.	English List Price.		
			£	s.	d.
	<b>HEADLAMPS—Continued—</b>				
	Bulb Holder Clip and Screw ... ..	N890	4	0	dozen
	Bulb Holder Clip and Screw ... ..	N890		6	each
	Biflex Bracket Assembly ... ..	NC305/47	3	9	each
63	Dipping Reflector complete with E5/ER Dipper Unit ...	RA127	1	12	9 each
64	Dipper Unit complete ... ..	E5/ER	14	0	each
	Dipper Unit Fuse (per box of 1-dozen) ... ..	FA5	1	6	box
65	Front Rim complete with Glass (L140) ... ..	LR95	6	6	each
	Front Rim complete with Glass, Difusa (LB140S) ... ..	LR133	8	6	each
66	Glass (Difusa) ... ..	NG13/4	2	0	each
	Glass (Difusa) plain centre ... ..	NG13/1	2	0	each
67	Reflector Joint Bead ... ..	NC305/16	4	0	dozen
	Reflector Joint Bead ... ..	NC305/16		6	each
	<b>1130 SIDELAMP—Black—</b>	<b>1130/Blk/12v</b>	1	1	0 pair
	<b>1130 SIDELAMP—Chromium—</b>	<b>1130/Chr/12v</b>	1	3	6 pair
68	Bulb ... ..	BAS.10.S	1	3	each
69	Base Plate complete with Bulb Holder ... ..	BW497/8	1	6	each
70	Front Rim complete with Glass ... ..	LR50	1	9	each
	<b>No. 40AB STOP TAIL LAMP—Black—c/w SWITCH—</b>	<b>No.40AB/Blk/12v</b>	1	1	0 each
71	Bulb ... ..	BAS.10.S	1	3	each
72	Bulb Plate and Partition Assembly ... ..	BA122	2	3	each
	Front Rim complete with Glass, Mask and Securing Screw ...	LR141	4	3	each
	Mask ... ..	NC403/27	1	0	each
73	Glass (ruby stippled) ... ..	NC403/8		9	each
	<b>STW9A BATTERY—less COVER &amp; FITTINGS—DRY—</b>	<b>STW9A only</b>	4	10	0 each
	Terminal Lug—positive ... ..	S2267/1	1	6	each
	Terminal Lug—negative ... ..	S2267/2	1	6	each
	Vent Plug with Washer ... ..	S2106/4D		6	each
	<b>SHOCK ABSORBER SPARES—</b>				
74	Nearside Unit complete (less Brackets)—front ... ..	S66/13X	1	5	0 each
	Nearside Unit complete (less Brackets)—rear ... ..	S66/14X	1	5	0 each
	Offside Unit complete (less Brackets)—front ... ..	S66/13Y	1	5	0 each
75	Offside Unit complete (less Brackets)—rear ... ..	S66/14Y	1	5	0 each
76	Nearside Lever Arm and Connecting Link Assembly—front ...	LLP/66/13X	12	0	each
	Nearside Lever Arm and Connecting Link Assembly—rear ...	LLP/66/14X	12	6	each
	Offside Lever Arm and Connecting Link Assembly—front ...	LLP/66/13Y	12	0	each
77	Offside Lever Arm and Connecting Link Assembly—rear ...	LLP/66/14Y	12	6	each
78	Connecting Link Pin Assembly—front ... ..	BP129	4	6	each
79	Connecting Link Pin Assembly—rear ... ..	BP131	4	0	each
80	Connecting Link Pin Nut ... ..	8007/186	3	0	dozen
	Connecting Link Pin Nut ... ..	8007/186		6	each
81	Connecting Link Pin Lock Nut ... ..	8007/200	3	0	dozen
	Connecting Link Pin Lock Nut ... ..	8007/200		6	each
82	Lever Arm Cotter ... ..	LM1		8	each
83	Filler Plug (1/4in. diameter) ... ..	9011/20	3	0	dozen
	Filler Plug (1/4in. diameter) ... ..	9011/20		6	each
	Luvax Fluid in Special Tins containing one pint ... ..	LM27	2	6	per tin
	<b>SET OF MINOR PARTS—</b>	<b>ST608</b>	2	6	set

If the model and type marks on your machine are not the same as given here, please quote them in full when ordering

INSIST UPON GENUINE LUCAS SPARE PARTS