


DYNAMO C45H
STARTER M418AL
LUCAS-STARTIX AUTOMATIC
STARTING
STEERING COLUMN
SWITCH SLC2
CUT-OUT, REGULATOR &
FUSE BOX R.J.F.
COIL Q12
DISTRIBUTOR DJ6A

WIRING DIAGRAM FOR 12-VOLT EQUIPMENT (EARTH RETURN)

AS FITTED TO STANDARD 20 H.P. CARS (1934)

Particulars of Bulbs.

Headlamps:—B.A.S. No. 4S.
Side, tail, stop and
panel lamps:—B.A.S. No. 10S.
Reverse lamp:—B.A.S. No. 3S.
Ignition warning
lamp:—No. 3515 M.E.S.
"Trafficators":—No. T126F.

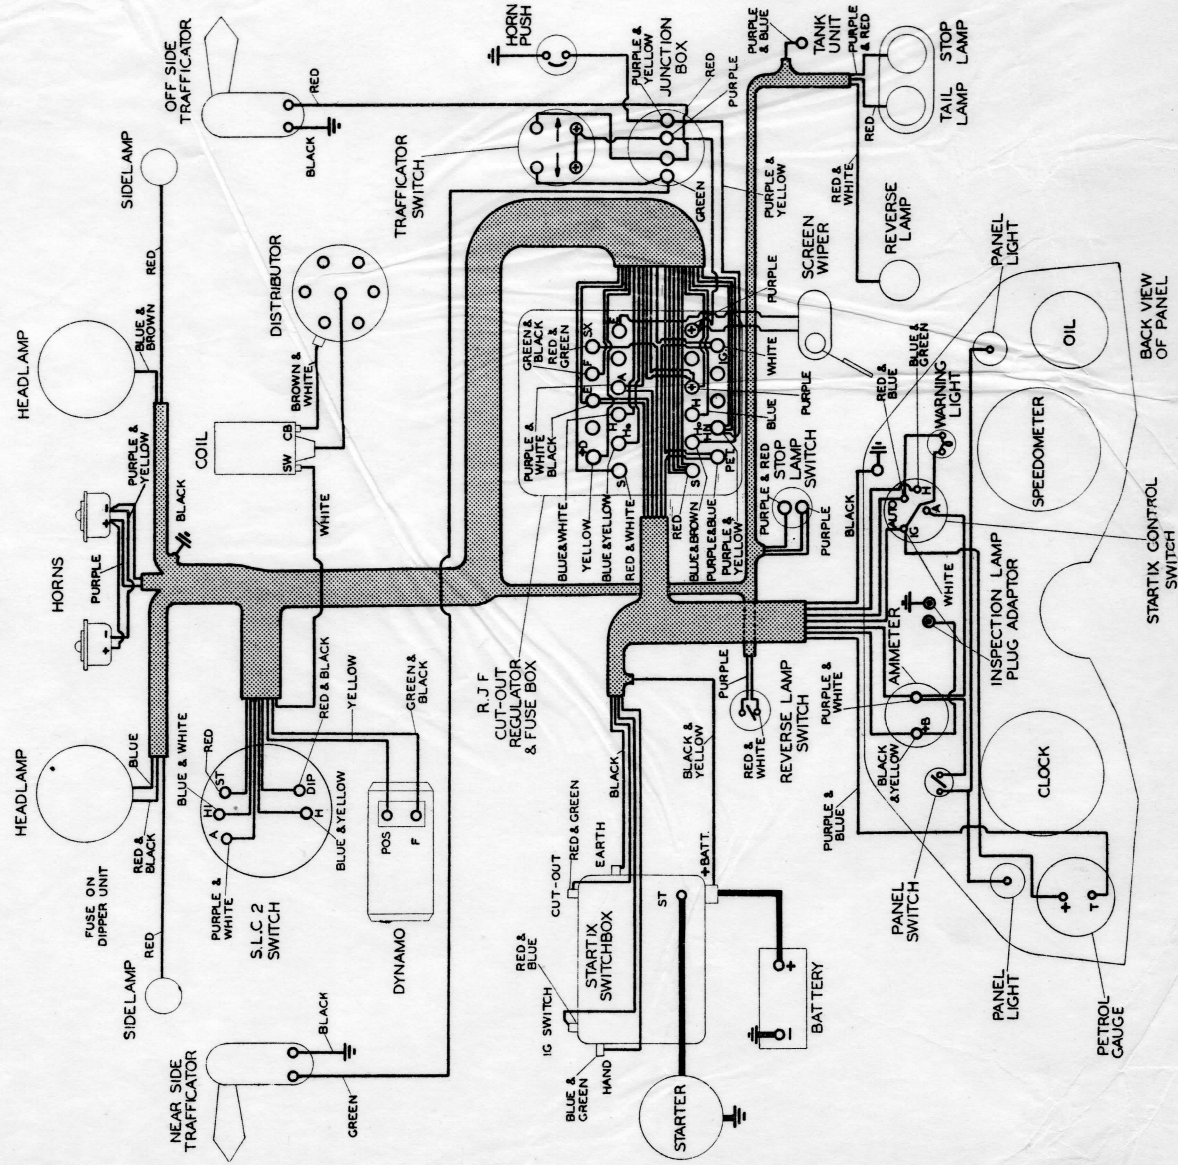

Shaded portions show where cables are braided together
in a protective sheathing.
Colours indicate coloured sleeving on ends of leads.

TECHNICAL DIAGRAM

